

Quick Install Guide

Quota warning host

FH101

Warn

When working, the casing should not be disassembled. Please be cautious when touching the manually disassembled equipment casing to avoid equipment damage. This is an A-grade product that may cause radio interference in living environments. In this case, it may be necessary for users to take practical and feasible measures against interference.

Attention

If you find any shortage or damage to accessories, please contact your local dealer in a timely manner. The product images/interface screenshots in this guide are for illustration purposes and are intended to assist users in installing and configuring products. Please refer to the actual product/interface for details.

Quick Install Guide

Product Introduction


The passenger quota warning host mainly works in collaboration with passenger flow equipment and large passenger flow screens, and can achieve large screen display and alarm of the number of passengers in a single area or multiple areas. The backend system of the quota warning host is designed for viewing the offline/online status of passenger flow equipment, viewing/exporting entry and exit data, displaying single or multiple regional data on large screens, configuring personalized quota warnings, and remotely managing passenger flow equipment.

product accessories

1. Fixed capacity host (x1)
2. Power supply+cable (x1)
3. HDMI cable (x1)
4. Remote control (x1)
5. Support bracket (one on each side)
6. Quick operation guide (x1)
7. User Manual (x1)

8. Adapter (x1)


Product Panel

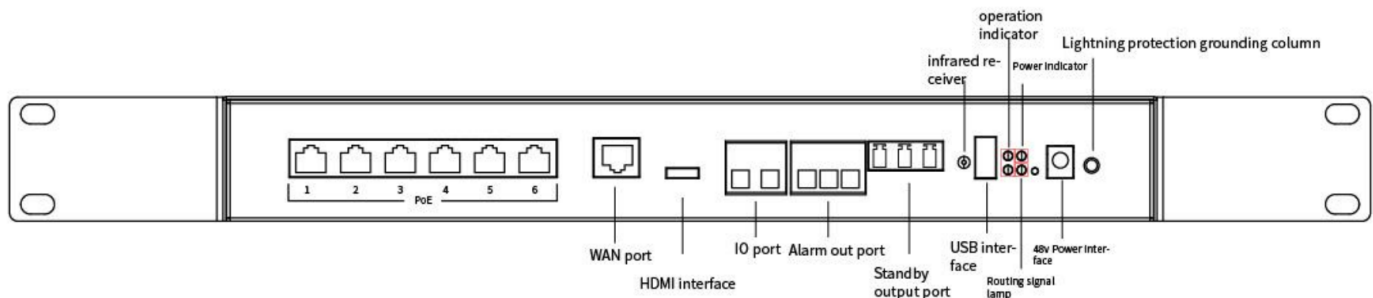

1. Work indicator light: always on: always on when the system is working normally; Off: Turns off when the system is powered off or shut down
2. Routing signal light: always on: system alarm, indicator light always on; Off: Alarm cleared, indicator light turned off
3. USB interface: used for technical debugging of the host, can connect to external devices
4. HDMI interface: Connect to display large screen
5. WAN network port
6. Power interface: Connect the power supply
7. Alarm interface: can be connected to external alarms
8. Grounding hole

Product size


Fixed personnel warning host: Unit (MM) 330 x 180 x 50

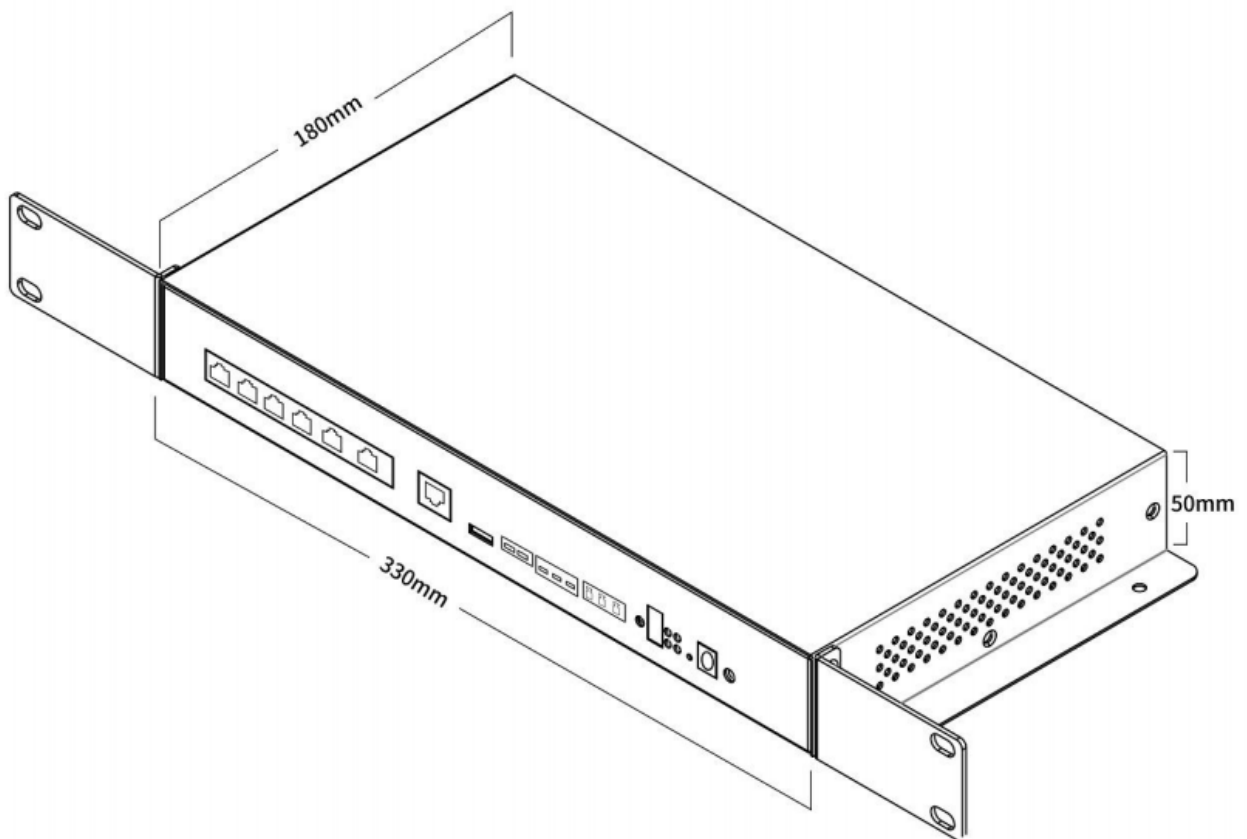


Installation method

1. Three ways to fix the host


① Directly fixed to an object

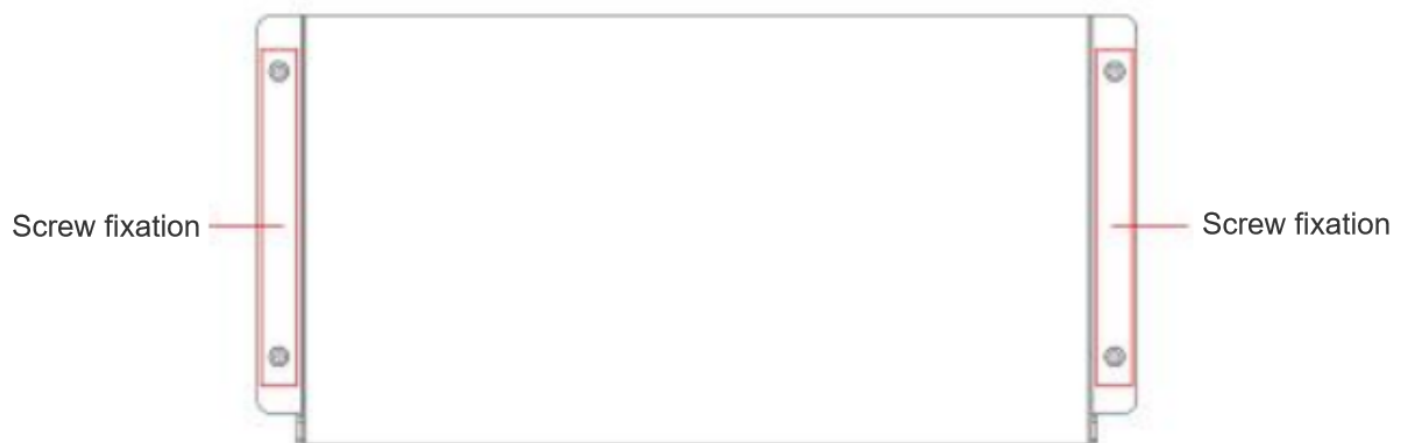

② Can be placed directly on an object

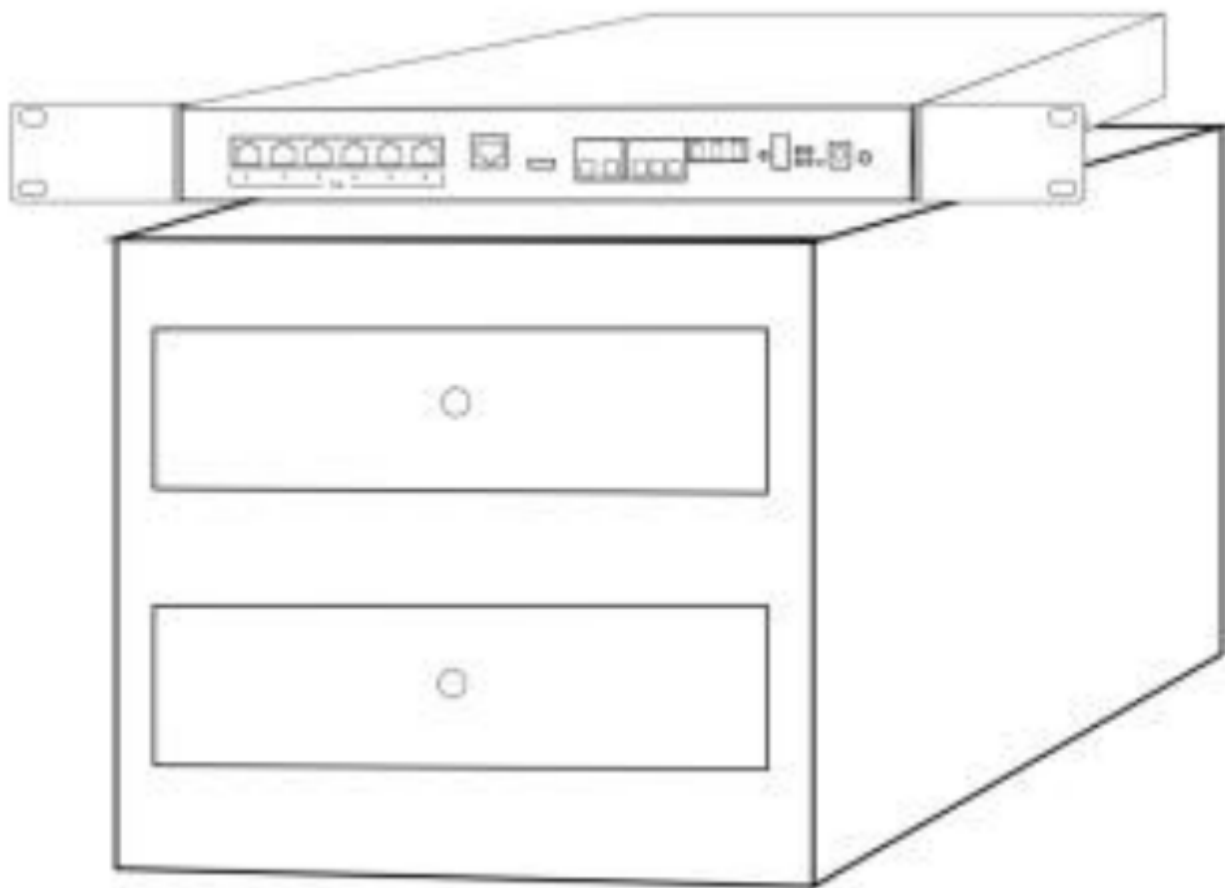


③ Fixed on standard cabinet

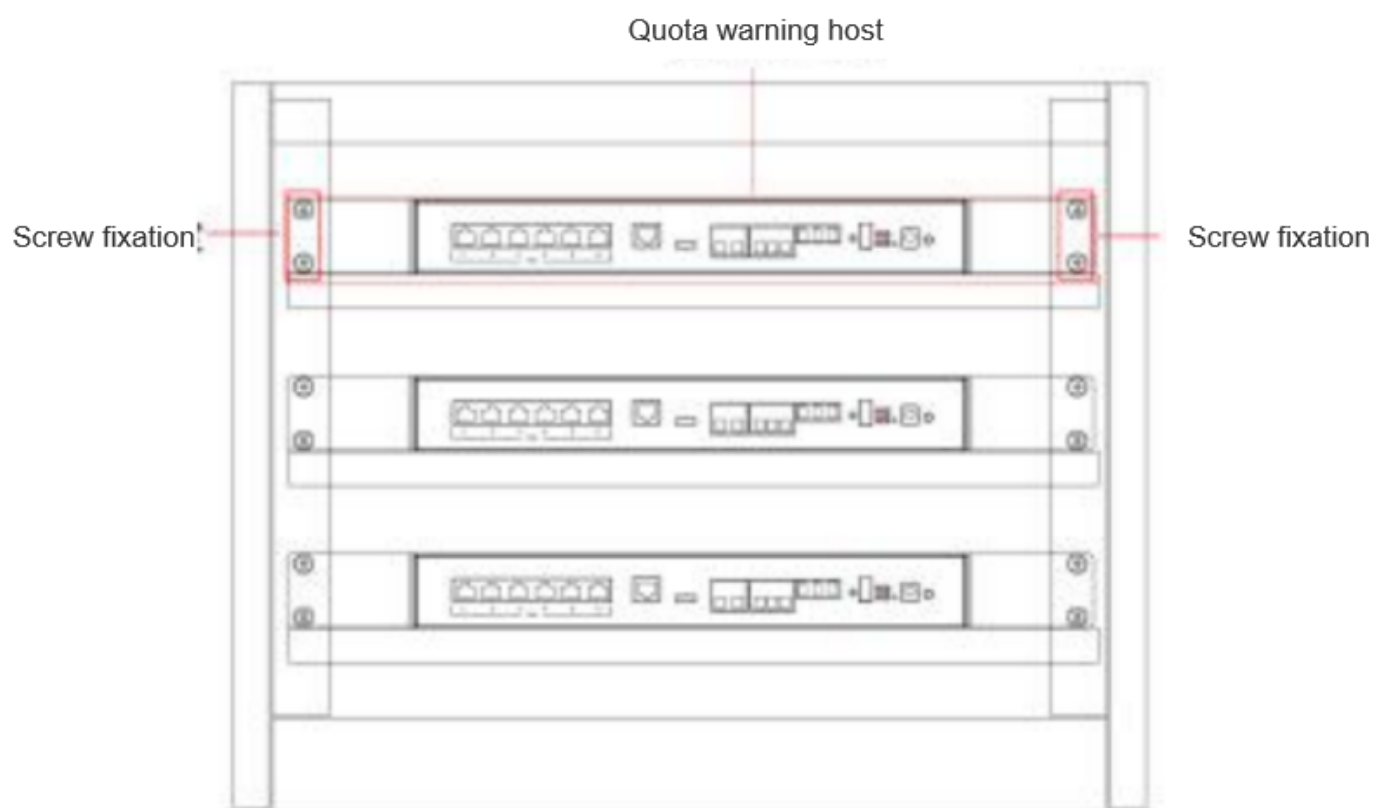


2. Connect the configured HDMI high-definition cable to the host and display screen




3. Connect passenger flow equipment, method one: connect directly to the network cable;
Method 2: Connect through a router.

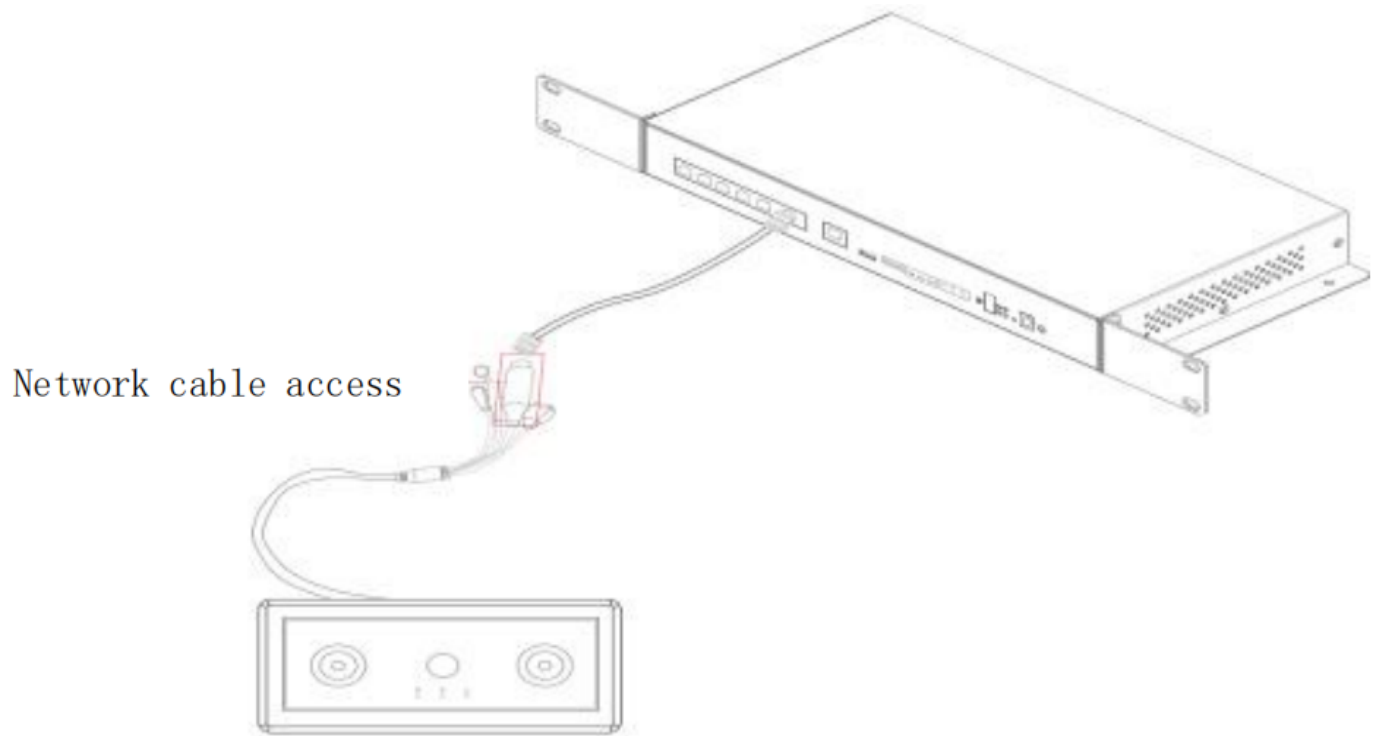


Network
cable
access

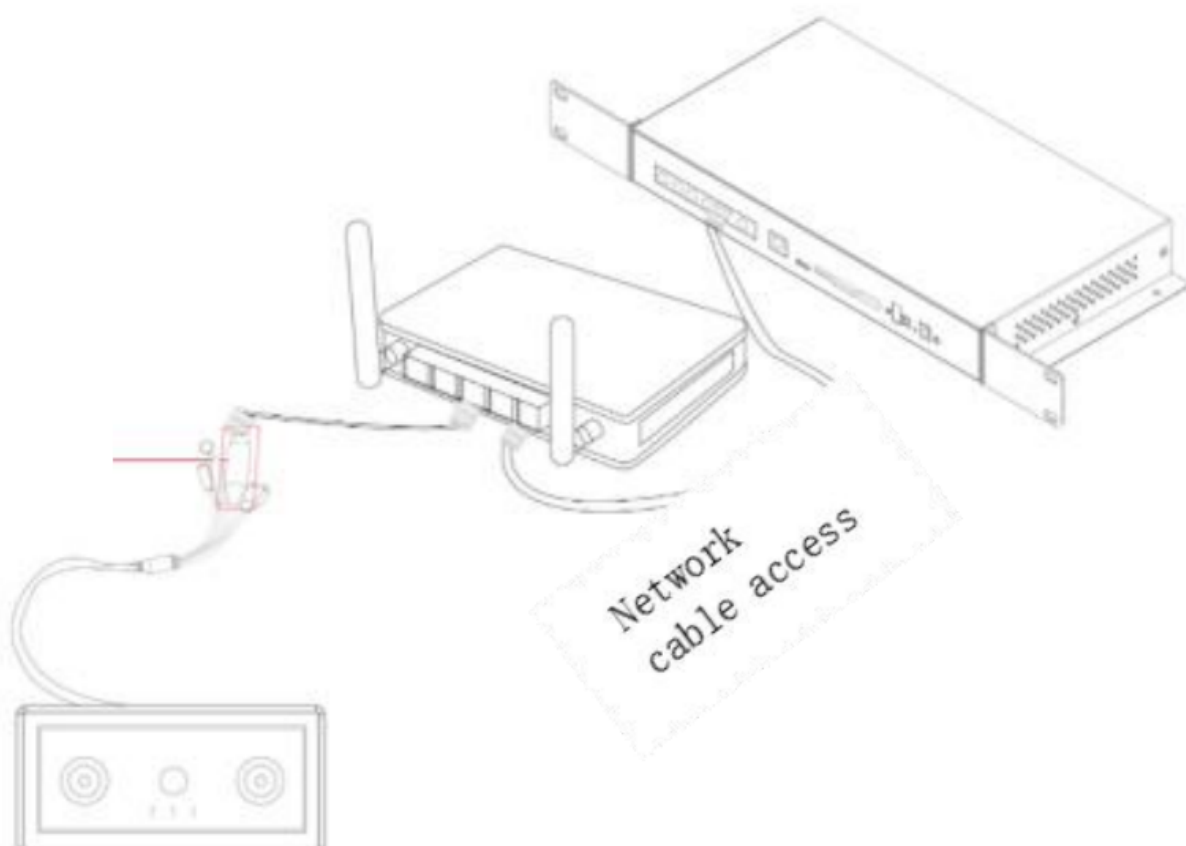

4. For the first time using a network cable to connect the host, please refer to the user manual for specific configurations after connection

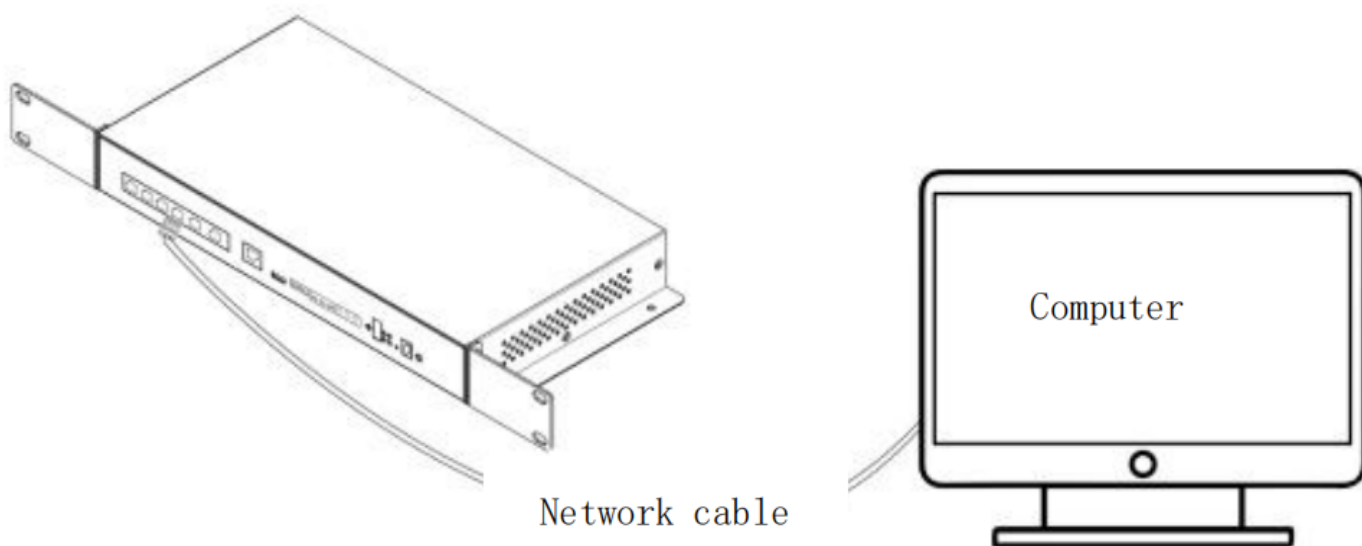

5. Insert the power supply, and the host can enter autonomous operation

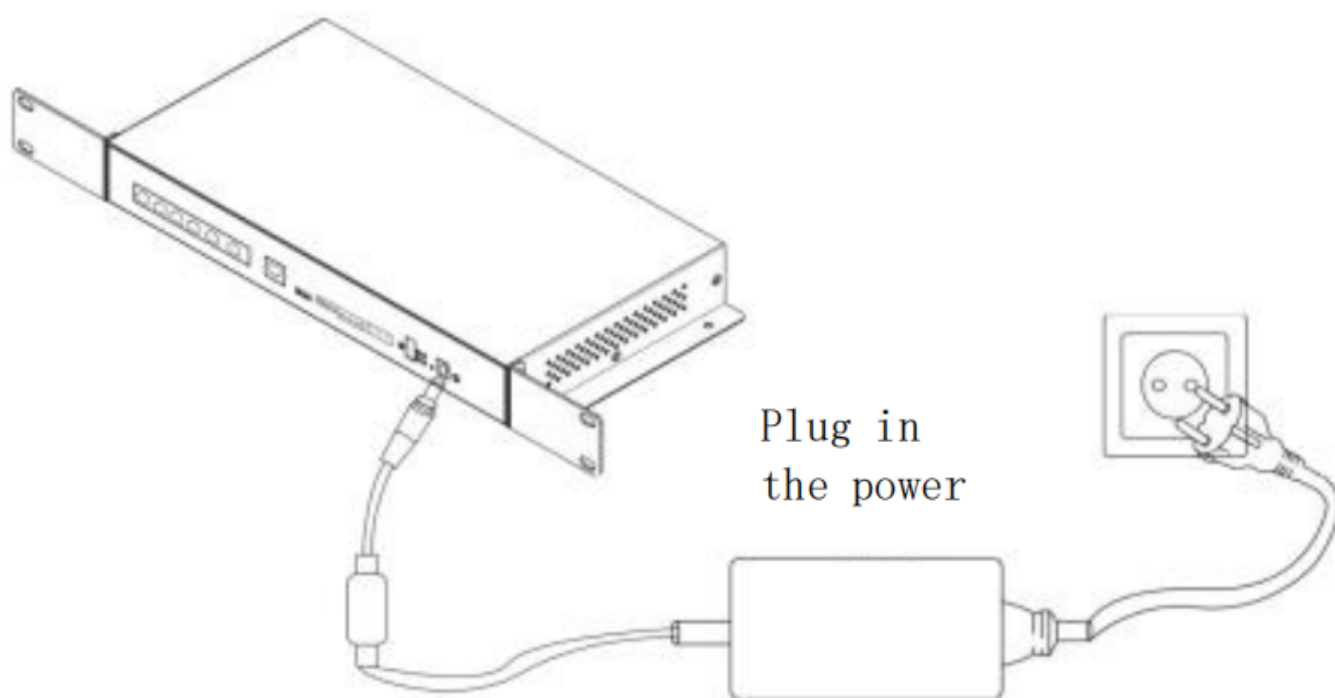

Plug in
the power